



Phone: (800) 419-8090 Fax: (770) 947-9916

Excavator Grapple Installation

- The excavator grapple is supplied with all pins including the main stick pin and curling link pin.
- Place grapple on a smooth, level surface with the teeth to ground and mounting area up.
- Remove both the main stick pin and the curling link pin.
- Next, remove the bucket and bucket pins from the excavator stick and curling link.
- Position excavator so that the stick pin holes and pin boss holes in the grapple align.
- Install the pins in the same manner as if installing a bucket. Use shims if needed.
- Pin the stabilizer arm and adjustable stabilizer bracket with pin in rear hole.
- Finally, position grapple body approximately 90 degrees to boom arm then tack and weld the bracket to boom arm.

